



# Adjust the Door Hinges

After leveling the cabinet, examine the gaps between the doors and the cabinet. If the gaps are uneven, the doors need to be adjusted.


## 1 Vertical Gaps

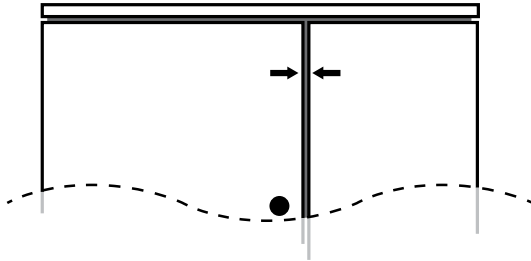

To improve the vertical gap, adjust the Phillips screw. Tightening the screw will pull the door toward the center of the cabinet. Loosening the screw will pull the door toward the outside edge.

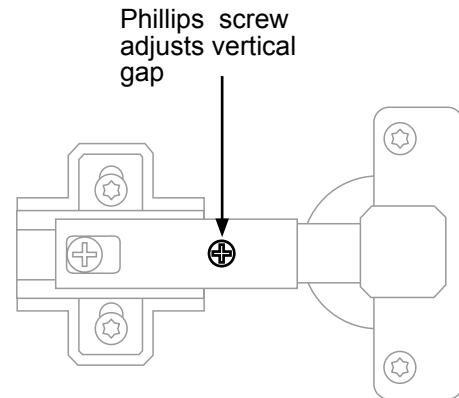


## 2 Horizontal Gaps

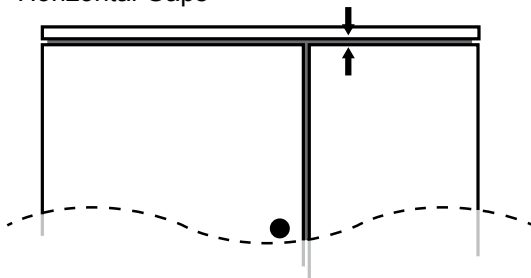


To improve horizontal gap, loosen the Torx screws only enough to slide the hinges. Do not remove the screws completely. Carefully slide the doors up or down until the horizontal gap is uniform. When properly aligned, tighten the screws.

Torx screws  
adjusts horizontal  
gap

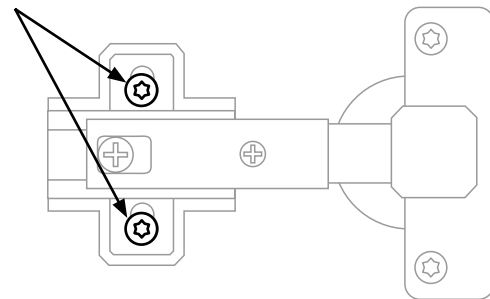

## 3 Side Gaps

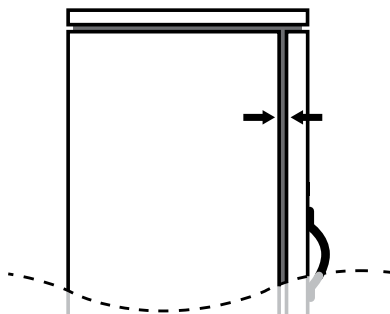

To improve the door gap at the side of the cabinet, loosen the side gap Phillips hinge screw and slide the hinge back to close the gap, or forward to increase the gap. Do not remove the screw. Tighten when finished.

Phillips screw  
adjusts side  
gap

