


STEP 1

Remove drawers before flipping any cabinet over.

STEP 2

Attach splice plate with (8) sheet metal screws as shown.

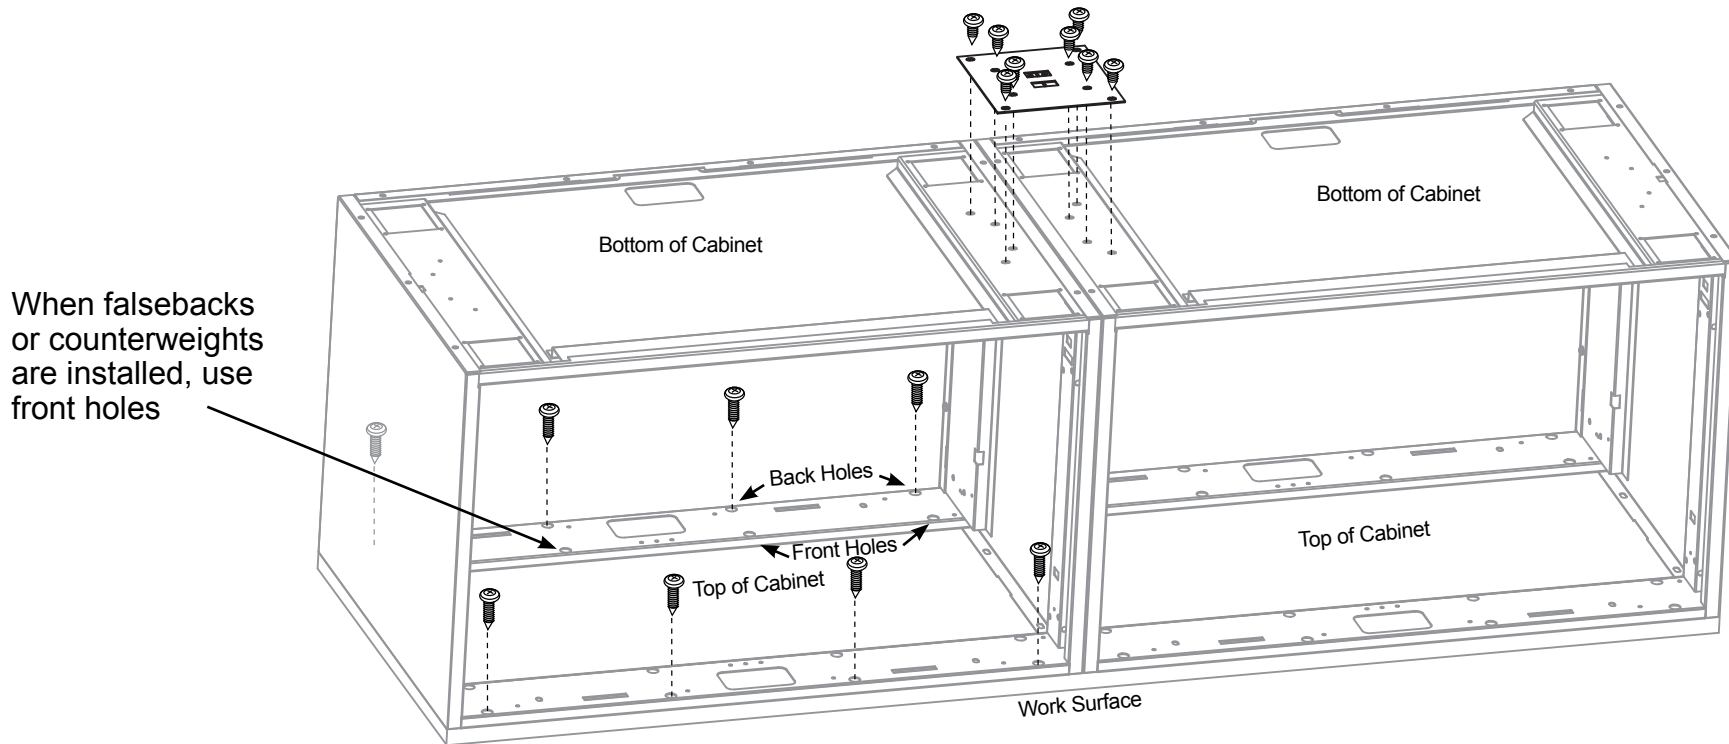

STEP 3

Fasten common top with (8) work surface screws in the locations shown for both cabinets



electric screw driver



#2 Phillips



sheet metal screw



Phillips screw driver



work surface screw