



METAL MODESTY PANEL INSTALLATION

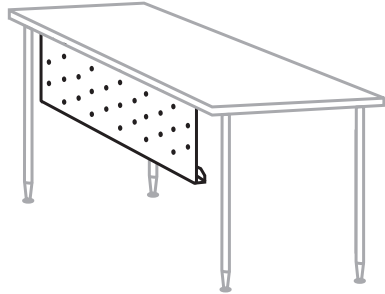


STEP 1

Turn work surface upside down (be sure it is on carpet or a soft, non-abrasive surface so as not to scratch).

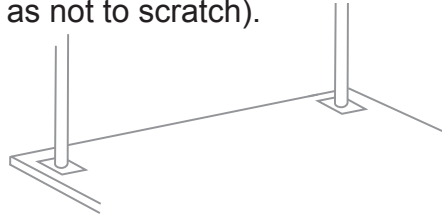

STEP 2

Center modesty panel on work surface and screw in work surface screws. You can pre-drill with a 1/8" drill bit before you screw in work surface screws; be careful to not drill all the way through the work surface. Front of modesty panel should be flush with front of desk leg.

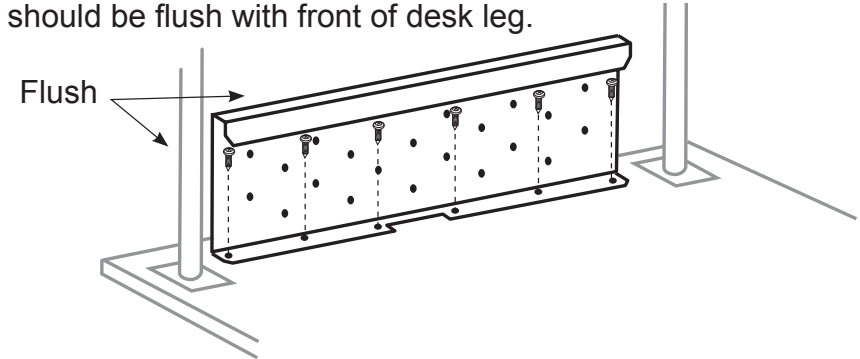

electric screw driver



#2 Phillips



work surface screw



Phillips screw driver



1/8" drill bit